




Kenworth Step Thru

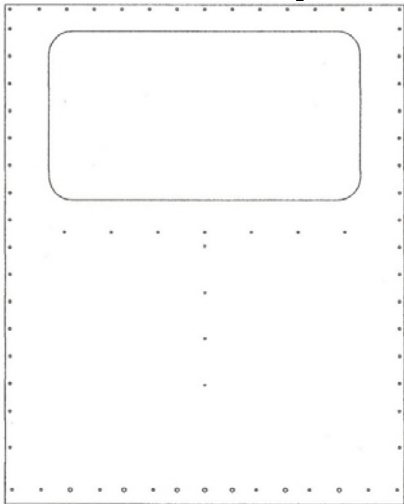


Fits:

All Non-Integrated Sleeper Cabs
Manufactured After 1981


Notes:

- Is Height Of Carpet Behind Seat 18" or 7" Inches And What Color.
- Have Colors Of Vinyl From Top To Bottom
- Is Your Front Windshield Flat Or Bent Glass
- Have VIN # Ready

Interior Options:

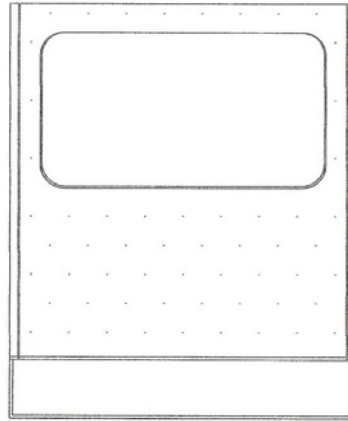

Old Style Interior

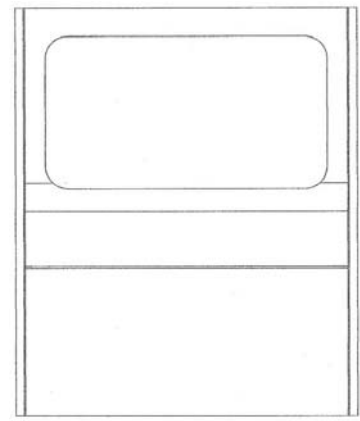

New Style Interior

Features:

- 0.063 Aluminum Sheet Construction
- Machine Cut Panel
- Single Panel Construction
- Primed And Ready For Paint
- Pre-Drilled Holes Match Kenworth Rivet Line

Standard Kit Includes:

- Installed Aluminum Bracing
- Installed Window
- Black Plastic Interior with Insulation
- Hucks Or Pull-Rivets
- Seam Sealer
- Instructions

Available Options:

- Factory OEM Interior with Insulation
- Work Lights
- Sliding Glass Window
- Paint